


TRACKMASTER GRADER SET-UP

And User Guide

3 POINT LINKAGE

1

Adjust the adjusting arms (A and B) to allow play in them and allow them to swing a little bit to allow the grader to 'float' slightly.

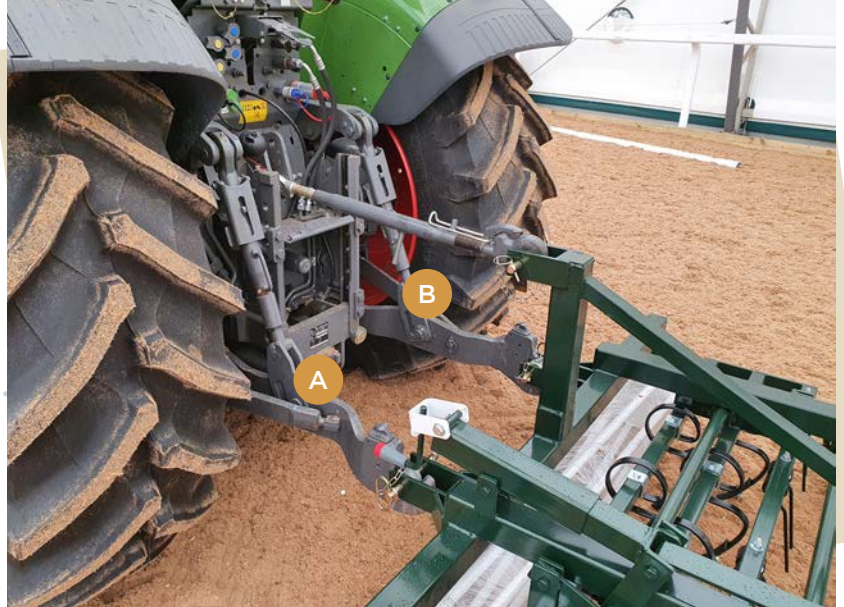

2

Reverse the tractor up to the grader and lift the tractor arms up to catch the tractor balls. Make sure the clips are in place to stop the balls coming out of the arms during grading.

3

Attach the Top Link to the top of the 3 point linkage and adjust the screw so that the top link sits loose when the grader is on the surface. This makes sure the grader is running level.



EST. 1984

EQUESTRIAN
SURFACES LTD

01282 834984 info@equestriansurfaces.co.uk
www.equestriansurfaces.co.uk



TOWBAR ATTACHMENT

Connect the towbar using the pins on the 3 point linkage connections. Attach the top link from the top 3 point linkage connection to the towbar connection.


With the top link in place it will allow the front crumbler to lift off the floor when the wheels are lowered.



MAINTENANCE POINTS

1

The bearings on the crumblers require 2 pumps of grease every 2 weeks approximately.

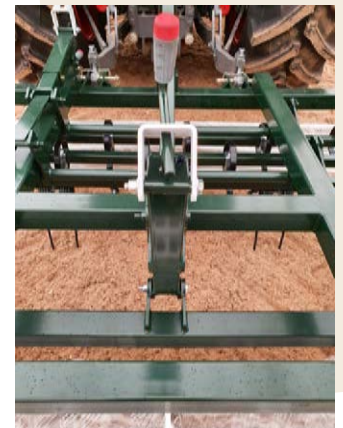

2

The winding handles need 3 pumps of grease once per month.

SETTING TINE DEPTH

Turn the winding handle to raise or lower the depths of the tines to the required depth. More information on the required depth of tines is included on our Maintenance Guidelines Leaflet.



EST. 1984

EQUESTRIAN
SURFACES LTD

01282 834984 info@equestriansurfaces.co.uk
www.equestriansurfaces.co.uk

